



2020 Changan Truck Catalog
- Parts Manual -

Table of Contents

Parts Manual

Leaf Spring Assembly.....	Page 1
Fuel Deline and Fuel Pump	Page 1
Wheel and Tire	Page 2
Console Box.....	Page 2
Gear Shift Control System	Page 3
Final Drive and Differential Gear Assembly	Page 3
Spare Tire Carrier.....	Page 4
Front Brake	Page 4
Absorber & Strut Assembly, FR Suspension	Page 5
RR Brake.....	Page 6
FR Suspension	Page 7
Fuel Tank.....	Page 8
Propeller Shaft	Page 8
Battery.....	Page 9
Wiper Assembly.....	Page 9
FR Seat Belt	Page 10
FR Stabilizer Bar.....	Page 11
Parking Brake.....	Page 11
Steering Gear Assembly.....	Page 12
Steering Wheel.....	Page 12
Steering Shaft.....	Page 13

Table of Contents

FR Upper Member and Dash Panel	Page 13
Side Body Panel (Single Cab Model)	Page 14
Side Body Panel (Double Cab Model).....	Page 14
Accelerator Pedal Assembly	Page 15
Brake Master Cylinder.....	Page 15
Brake Pipe (without ABS)	Page 16
Light System	Page 17
Lock Set	Page 17
Cooling System.....	Page 18
Washer Assembly.....	Page 18
Switch Assembly, Combination and Electrical Control.....	Page 19
Combination Meter	Page 19
Wiring Harness	Page 20
Seat Assembly, FR	Page 20
Seat Assembly, 3rd (Double Cab Model)	Page 21
ACK Assembly	Page 21
Carpet Assembly	Page 22
Instrument Panel	Page 22
Air Pipe	Page 23
A/C System	Page 23
Radio and Antenna	Page 24
FR Windshield	Page 24
Glass and Weatherstrip, FR Door	Page 25

Table of Contents

FR Door Lock and Inner Trim	Page 26
FR Hood and Accessories	Page 27
Roof Panel (Single Cab)	Page 27
Roof Panel (Double Cab).....	Page 27
FR Fender	Page 28
Body Frame Welding Assembly	Page 28
Clutch Cable Assembly.....	Page 28
Accelerator Cable.....	Page 29
RR Axle.....	Page 29
Half Shaft, RR Axle	Page 30
Deck	Page 30
Back Panel	Page 31
FR Bumper.....	Page 31
Roof Lining, Sunvisor.....	Page 32
Rearview Mirror.....	Page 32
Mudguard Flap.....	Page 33
Outer Garnish, FR Triangle	Page 33
Wind Guiding Cover.....	Page 33
Floor Side Granish, Wheel Arch	Page 34
Intake Manifold.....	Page 34
Oil Pump Cover Assembly, Timing Belt Front and Oil Sump Assembly.....	Page 35
Fuel and Ventilation System	Page 36
Cooling System.....	Page 37

Table of Contents

Eelectrical Equipments	Page 38
Engine Assembly	Page 39
Cylinder Head and Cover.....	Page 39
Crankcase	Page 40
Exhaust System	Page 40
Harness Assembly, Engine and Accessories	Page 41
Timing System	Page 41
Engine Bracket.....	Page 42
Clutch	Page 42
Air Cleaner.....	Page 43
Motor Assembly, Starting and Accessories.....	Page 43
Pipe Assembly, Muffler	Page 44
Transmission Assembly and Accessories.....	Page 44
Case Assembly, Gear Shift.....	Page 45
Tranmission Case	Page 46
Clutch Fork	Page 46
Input Shaft.....	Page 47
Countershaft	Page 48
Shaft, Reverse Gear	Page 48
Output Shaft	Page 49
Countershaft	Page 48
Shaft, Reverse Gear	Page 48
Output Shaft	Page 49

Table of Contents

Crankshaft and Connecting Rods System.....	Page 49
Gearshift Lever	Page 50
Extension Case.....	Page 51