



**2020 USA Truck Catalog**  
- Parts Manual -

# Table of Contents

---

## Parts Manual

Intake Manifold.....	Page 1
Oil Pump Cover Assembly, Timing Belt Front and Oil Sump Assembly.....	Page 2
Fuel and Ventilation System .....	Page 3
Cooling System.....	Page 4
Electrical Equipments .....	Page 5
Battery.....	Page 6
Engine Assembly .....	Page 6
Cylinder Head and Cover.....	Page 7
Crankcase .....	Page 8
Exhaust Manifold.....	Page 8
Harness Assembly, Engine and Accessories .....	Page 9
Timing System .....	Page 9
Engine Bracket.....	Page 10
Clutch.....	Page 10
Air Cleaner.....	Page 11
Motor Assembly, Starting and Accessories.....	Page 11
Pipe Assembly, Muffler .....	Page 12
Transmission Assembly and Accessories.....	Page 12
Clutch Fork .....	Page 13
Transmission Case .....	Page 13
Input Shaft.....	Page 14

# Table of Contents

---

Counter Shaft .....	Page 15
Shaft, Reverse Gear .....	Page 15
Case Assembly, Gear Shift.....	Page 16
Output Shaft .....	Page 16
Crankshaft and Connecting Rods System.....	Page 17
Valve System.....	Page 18
Gearshift Lever .....	Page 19
Extension Case.....	Page 20
RR Door and Inner Part .....	Page 21
RR Door Regulator .....	Page 22
RR Door Lock.....	Page 23
2nd Seat Belt.....	Page 24
3rd Seat Belt.....	Page 24
Fule Filler System .....	Page 25
Back Door .....	Page 26
RR Quarter Trim .....	Page 27
RR Bumper .....	Page 27
Roof Lining, Assistant Grip, Sunvisor.....	Page 28
Pillar and Other Inner Trim Panel.....	Page 28
Wind Guide, Radiator .....	Page 29
Seat Assembly, 2nd .....	Page 29
Floor Side Garnish, Wheel Arch.....	Page 30
Seat Assembly, 3rd.....	Page 30

# Table of Contents

---

Rear Axle .....	Page 31
Side Body Panel Welding Assembly.....	Page 31
Body Frame Welding Assembly .....	Page 32
Roof Panel.....	Page 33
Light System .....	Page 34
Wiring Harness .....	Page 34
Lock Set .....	Page 35
A/C System .....	Page 35
Radio and Antenna.....	Page 36
Seat Assembly, FR .....	Page 36
Carpet .....	Page 37
Leaf Spring Assembly.....	Page 37
Fuel Tank Assembly.....	Page 38
Wheel and Tire .....	Page 38
Spare Tire Carrier.....	Page 39
Final Drive and Differential Gear Assembly .....	Page 39
FR Upper Member and Dash Panel .....	Page 40
Fuel Dideline and Fuel Pump .....	Page 40
Accelerator Cable.....	Page 41
Clutch Cable Assembly.....	Page 41
Gear Shift Control System .....	Page 42
Propellor Shaft .....	Page 42
Accelerator Pedal Assembly .....	Page 43

# Table of Contents

---

Brake Master Cylinder .....	Page 43
Brake Pipe .....	Page 44
FR Brake .....	Page 45
RR Brake.....	Page 46
Parking Brake.....	Page 46
Steering Wheel .....	Page 47
Steering Shaft.....	Page 47
Steering Gear Assembly.....	Page 48
FR Suspension .....	Page 48
FR Stabilizer Bar.....	Page 49
Absorber and Strut Assembly, FR Suspension .....	Page 49
FR Door Lock and Inner Trim .....	Page 50
Glass and Weatherstrip, FR Door .....	Page 51
FR Hood and Accessories .....	Page 52
FR Windshield .....	Page 52
FR Seat Belt .....	Page 53
FR Fender .....	Page 54
FR Bumper.....	Page 55
Console Box.....	Page 55
Rearview Mirror.....	Page 56
Mudguard Flap.....	Page 56
Wind Guide Plate .....	Page 57
Outer Garnish, FR Triangle .....	Page 57

# Table of Contents

---

ACK Assembly .....	Page 57
Instrument Panel .....	Page 58
Air Pipe .....	Page 58
Washer Assembly.....	Page 59
Switch Assembly, Combination and Electrical Control .....	Page 59
Combination Meter .....	Page 60
Cooling System .....	Page 61
Wiper Assembly .....	Page 61
Rail Cover, RR Door Center .....	Page 62
Side Window Glass .....	Page 62